



Owners Manual

EW-550




Removing And Charging The Battery

Use your key to unlock the seat. Plug charger into any 110 wall outlet. You can charge your battery in two ways. Battery in or battery out. Charging the battery out of the moped you simply connect the charger via the plug at the top of the battery. Complete charge takes 4-6 hours.




Left Side Hand Controls

- A. Turn Signal - Note: Simply push right or left to indicate direction. Depress button to switch back to neutral.
- B. Headlight Control
- C. Horn

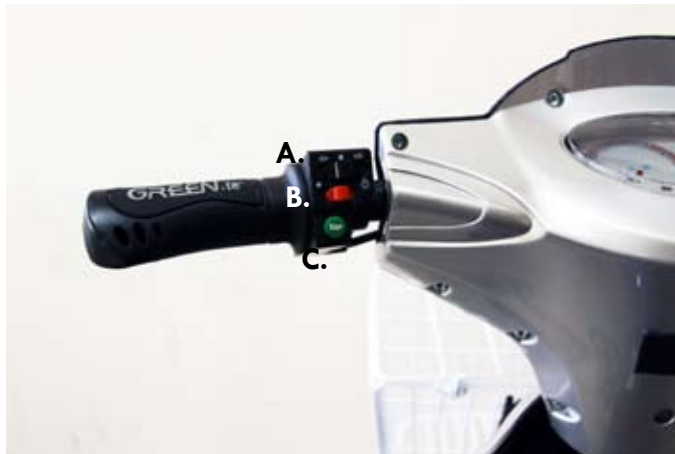

Right Side Hand Controls

- A. Cruise Control
- B. Twist Throttle - Cruise control is activated after 90 sec. at the same speed. Deactivated by rear wheel brake lever.

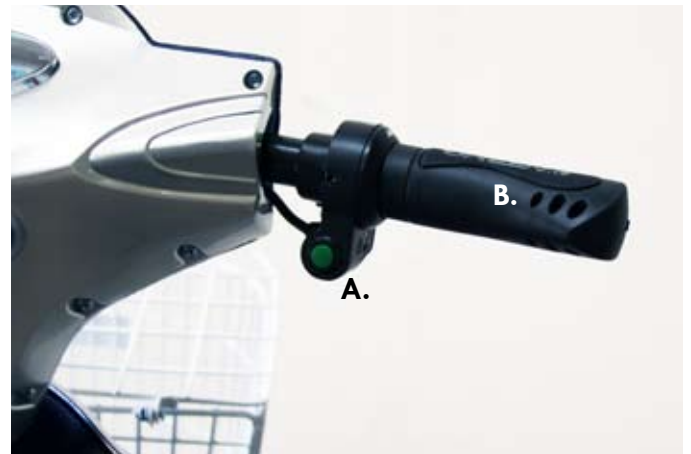



Front Brake Adjustment

Tighten or loosen the saddle nut at the end of the brake cable to create tension or release tension on the brakes. Test the brake as you tighten or loosen the saddle nut. Tighten or loosen until brake lever has about .75" between the lever and grip or desired distance. This adjustment is on the front brake and rear.



Rear Brake Adjustment

Loosen lock nut first. Tighten or loosen the adjustment nut to create tension or release tension on the brakes. Test the brake as you tighten or loosen the saddle nut. Tighten or loosen until brake lever has about .75" between the lever and grip or desired distance.





Glove Compartment

Use the key provided to lock and unlock the glove compartment

Storage Trunk

Use the key provided to lock and unlock the storage trunk



Install Mirrors

1. Remove the existing bolt.
2. Insert mirror
3. Screw on bolt and tighten

