



# Owners Manual

## EW-600




## Charging

Plug charger into any 110 wall outlet. You can charge your battery in two ways. Battery in or battery out. Charging with the battery in the moped you simply connect the charger via the plug under the seat. Charging the battery out of the moped you simply connect the charger via the plug at the top of the battery. Complete charge takes 4-6 hours.





## Left Side Hand Controls

- A. Headlight regular / high beam
- B. Turn signal - Note: Simply push right or left to indicate direction. Depress button to switch back to neutral.
- C. Horn

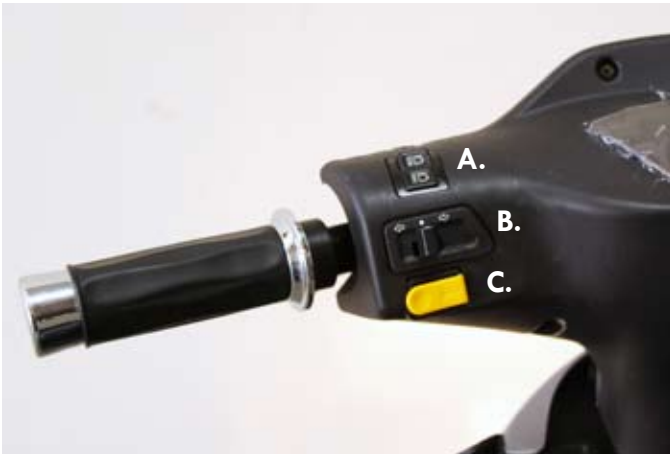

## Right Side Hand Controls

- A. Headlight on/off switch
- B. Twist Throttle

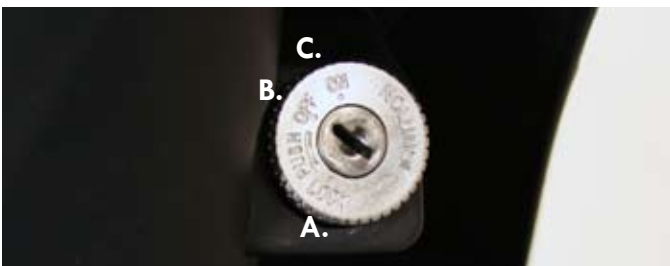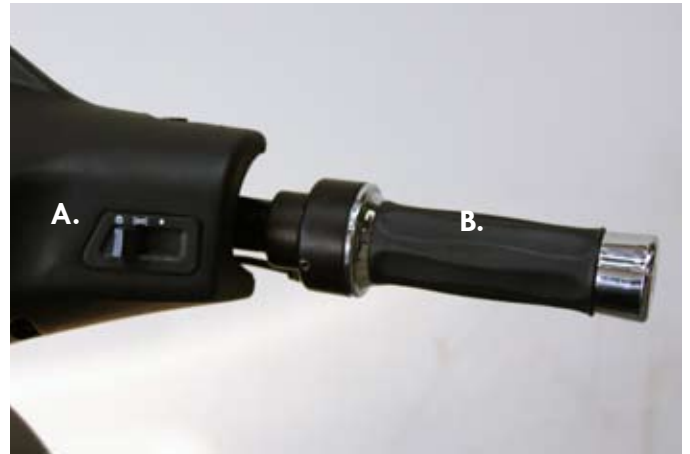

## Ignition Positions

- A. Front end lock position
- B. Power off position
- C. Power on position



### Removing The Battery

Use your ignition key to unlock the seat. Lock is located on the left side just below the seat. Move seat up until it stops. Unplug the battery from the moped and pull on the handle.



### Front And Rear Brake Adjustment

Tighten or loosen the saddle nut at the end of the brake cable to create tension or release tension on the brakes. Test the brake as you tighten or loosen the saddle nut. Tighten or loosen until brake lever has about .75" between the lever and grip or desired distance. This adjustment is on the front brake and rear.





### Bag Hook & Storage Bin



### Storage Trunk

Use the key provided to lock and unlock the storage trunk



### Removable Cranks & Pedals

Simple pull off and press on design

